



Kvaser Leaf v3 CB User's Guide



Copyright 2024-2025 Kvaser AB, Mölndal, Sweden
<https://www.kvaser.com>

Printed Wednesday 21st May, 2025

We believe that the information contained herein was accurate in all respects at the time of printing. Kvaser AB cannot, however, assume any responsibility for errors or omissions in this text. Also note that the information in this document is subject to change without notice and should not be construed as a commitment by Kvaser AB.

(This page is intentionally left blank.)

Contents

1	About this manual	4
2	Introduction	5
2.1	Welcome to Kvaser Leaf v3 CB	5
2.2	Major features	6
2.3	Additional software and documentation	6
3	Kvaser Leaf v3 CB hardware	7
3.1	Hardware installation	7
3.2	USB connection	7
3.3	CAN connection	8
3.4	CAN bus termination	9
3.5	Power supply	9
3.6	Layout	9
3.7	Updating the firmware	10
3.8	Technical data	10
4	Troubleshooting	12
5	Safety Instructions	13
5.1	Intended Use	13
5.2	Usage Warning	13
6	Disposal and Recycling Information	14
7	Legal acknowledgements	16
7.1	EU Regulatory Compliance	16
7.2	FCC Regulatory Compliance	17
7.3	Patents, Copyrights and Trademarks	18
8	Document Revision History	19

1 About this manual

This manual is intended for Kvaser Leaf v3 CB users. This document contains a description of the hardware's properties and general instructions for connecting the device to a computer.

2 Introduction

This section will describe the functions and features of the Kvaser Leaf v3 CB.

2.1 Welcome to Kvaser Leaf v3 CB



Figure 1: Kvaser Leaf v3 CB

Kvaser Leaf v3 CB is a reliable low cost product. With a timestamp precision of 50 microseconds it handles transmission and reception of standard and extended CAN messages on the bus. It is compatible with applications that use Kvaser's CANlib.

This guide applies to Kvaser Leaf v3 CB devices using at least firmware and driver versions listed in Table 1. For minimum compatible firmware and driver versions of Kvaser Leaf v3 CB see Table 7 on Page 10.

Device	Product Number	Firmware	Driver (Windows/Linux)
Kvaser Leaf v3 CB	73-30130-01532-6	v3.32	v5.45 (kcany/mhydra)

Table 1: Firmware and driver versions needed to support all functionality present in this guide.

2.2 Major features

- USB CAN interface.
- Powered through the USB connector.
- Supports CAN FD, up to 8 Mbit/s.
- Quick and easy plug-and-play installation.
- Supports both 11-bit (CAN 2.0A) and 29-bit (CAN 2.0B active) identifiers.
- Supports silent mode for analysis tools – listen to the bus without interfering.
- 20 000 msg/s, each timestamped with a resolution of 50 μ s.
- Fully compatible with applications written for other Kvaser CAN hardware with Kvaser CANlib.
- Support for SocketCAN.
- Compatible with J1939, CANopen, NMEA 2000[®] and DeviceNet. Higher layer protocol translation is handled by the user's application. For software support please see our Technical Associates products and our Software Download page (www.kvaser.com).
- Supports simultaneous usage of multiple Kvaser interfaces.

2.3 Additional software and documentation

The Kvaser CANlib SDK includes everything you need in order to develop software applications interacting with Kvaser CAN and LIN hardware. The SDK contains full documentation and many sample programs, written in C, C++, C#, Delphi, Python and Visual Basic. Kvaser CAN and LIN hardware is built around the same common software API. Applications developed using one device type will run without modification on other device types.

The latest versions of documentation, software and drivers can be downloaded for free at www.kvaser.com/download.

3 Kvaser Leaf v3 CB hardware

In this section you can read more about the CAN channels, power supply and LED indicators.

3.1 Hardware installation

For the Kvaser Leaf v3 CB to communicate with the host computer, a compatible version of the Kvaser driver and firmware must be installed.

The driver is installed by running the file `kvaser_drivers_setup.exe`. For instructions on how to update the firmware, see Section 3.7, Updating the firmware, on Page 10. The latest version of the driver and firmware can be downloaded from www.kvaser.com/download.

The firmware is downloaded and installed directly on the Kvaser Leaf v3 CB and the driver is installed on the host computer. After the driver has been installed on the host computer, the firmware may then be downloaded and installed on the Kvaser Leaf v3 CB.

3.2 USB connection

The Kvaser Leaf v3 CB has a 6-way connector for connecting USB which has the pinout described in Table 2. The connector is mated with a Molex 51021 PicoBlade™ (e.g. housing 51021-0600 and terminal 50079-8000). There are also holes for soldering wires directly or use a 5-pin 2.54mm pitch straight pin header or board stacker like e.g. Würth 61300511121 or 61303211221.

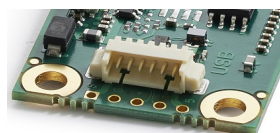


Figure 2: The USB connector.

Pin Number	Function
1	Shield
2	GND
3	D+
4	D-
5	5V
6	Not connected

Table 2: Pin configuration of the USB connector.

Letter or sign next to hole	Function
S	Shield
G	GND
+	D+
-	D-
5	5V

Table 3: Letters and signs next to holes for soldering.

3.3 CAN connection

The Kvaser Leaf v3 CB has one CAN channel via a 6-way connector which has the pinout described in Table 4. The connector is mated with a Molex 51021 PicoBlade™ (e.g. housing 51021-0600 and terminal 50079-8000). There are also holes for soldering wires directly or use a 4-pin 2.54mm pitch straight pin header or board stacker like e.g. Würth 61300411121 or 61303211221.

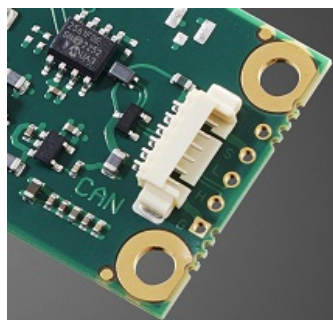


Figure 3: The CAN connector.

Pin Number	Function
1	GND
2	Not connected
3	CAN_H
4	CAN_L
5	Not connected
6	Shield

Table 4: Pin configuration of the CAN connector.

Letter or sign next to hole	Function
G	GND
H	CAN_H
L	CAN_L
S	Shield
' '	Not connected

Table 5: Letters and signs next to holes for soldering.

3.4 CAN bus termination

Every CAN bus must be terminated with a 120 Ohm resistor at each end of the bus. The Kvaser Leaf v3 CB does not contain any CAN bus termination, because its inclusion could cause severe disturbance in a system which is already correctly terminated.

For laboratory or testing use, the exact value of the termination resistors is not always critical. Sometimes a single terminator is sufficient. For production, proper termination is essential. If you see error frames on the bus, you should check the termination.



To save yourself a lot of trouble, always terminate the CAN bus properly.

3.5 Power supply

The Kvaser Leaf v3 CB is powered via the USB connector.

3.6 Layout

The Kvaser Leaf v3 CB has four mounting holes and two LEDs, one green for power to the left (LED1) and one yellow for CAN to the right (LED2), as shown in Figure 4. The LEDs' functions are shown in Table 6 on Page 10.

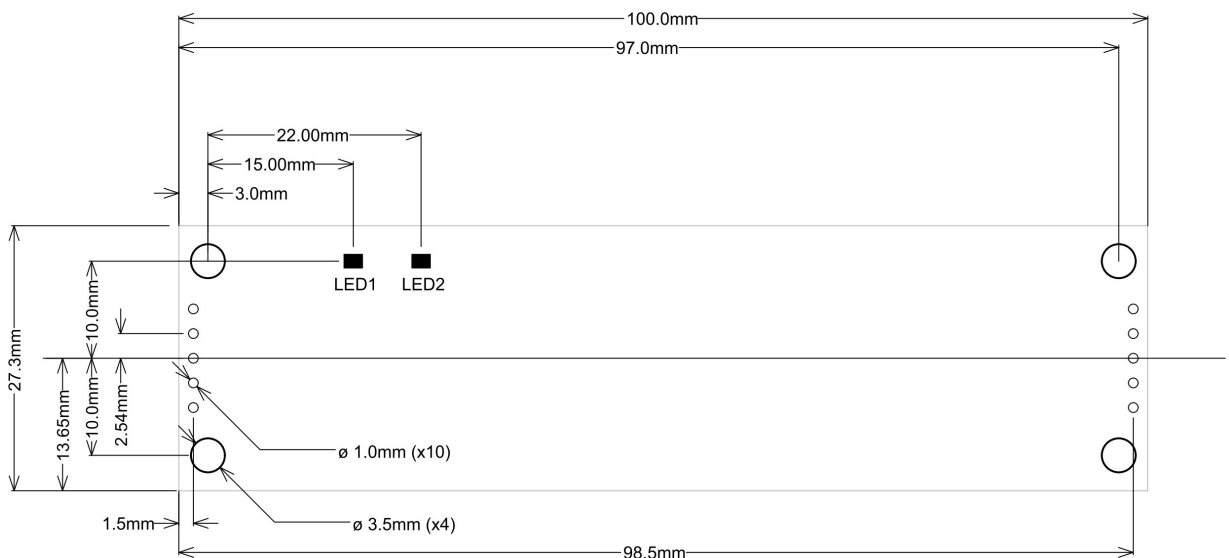


Figure 4: LEDs and mounting holes on the Kvaser Leaf v3 CB.

LED	Function	Description
PWR (Green)	Power	Steady light when unit is powered and working.
	USB configuration	Blinking once every three seconds when something is wrong with the USB connection.
	Firmware	2 Hz flash if something is wrong with the firmware or configuration.
CAN (Yellow)	CAN RxTx	Status for CAN channel.

Table 6: LEDs on the Kvaser Leaf v3 CB.

3.7 Updating the firmware

For the Kvaser Leaf v3 CB to communicate with the host computer, compatible versions of the Kvaser CANlib (including driver) and firmware must be installed.

The latest versions of firmware and drivers can be downloaded for free at www.kvaser.com/download.

Connect the Kvaser Leaf v3 CB to your host computer with the USB cable and start the update.exe application. A window opens showing the Firmware Update Instructions; read and follow those carefully.

To check the current firmware version, open “Kvaser Device Guide” which can be found in the Control Panel. Select “Kvaser Leaf v3 CB” in the tree view to the left, and click on the channel. The firmware revision information now appears in the right half of the window.

The absolute minimum firmware and driver versions needed in order to use Kvaser Leaf v3 CB are listed in Table 7.

Device	Min. Firmware Version	Min. Driver Version
Kvaser Leaf v3 CB	v3.32	v5.45

Table 7: Minimum compatible driver and firmware versions of Kvaser Leaf v3 CB.

3.8 Technical data

In Table 8 on Page 11 below you will find the Kvaser Leaf v3 CB's technical specifications.

CAN Channels	1
CAN Transceivers	Compliant with ISO 11898-2
Galvanic isolation	Yes
CAN Bit Rate	20 kbit/s to 1 Mbit/s
CAN FD Bit Rate	Up to 8 Mbit/s
Timestamp resolution	50 µs
Max message rate	20 000 msg/s
Error Frame Detection	Yes
Error Frame Generation	No
Silent mode	Yes
Kvaser MagiSync	No
Kvaser t programming	No
Kvaser CANtegrity	No
Host interface	USB 2.0
Host OS	Windows (10 or later), Linux.
Power consumption	Typical 100 mA
Dimensions	27 x 100 x 5 mm
Weight	5 g
Operating temperature	−20 °C to +70 °C
Storage temperature	−40 °C to +85 °C
Relative humidity	0 % to 85 % (non-condensing.)

Table 8: Technical Specifications.

4 Troubleshooting

Use “Kvaser Device Guide” in the Control Panel to verify that the computer can communicate with the Kvaser Leaf v3 CB. If the firmware version shown is all zeros, there are communication problems. If the LEDs are not flashing or do not light up at all, check the power supply.

5 Safety Instructions

5.1 Intended Use

Kvaser interfaces are used to connect computer systems to CAN buses. The Kvaser Leaf v3 CB is intended for connection to a computer via the USB port.

5.2 Usage Warning



WARNING FOR ALL USERS

WARNING! - YOUR USE OF THIS DEVICE MUST BE DONE WITH CAUTION AND A FULL UNDERSTANDING OF THE RISKS!

THIS WARNING IS PRESENTED TO INFORM YOU THAT THE OPERATION OF THIS DEVICE MAY BE DANGEROUS. YOUR ACTIONS CAN INFLUENCE THE BEHAVIOR OF A CAN-BASED DISTRIBUTED EMBEDDED SYSTEM, AND DEPENDING ON THE APPLICATION, THE CONSEQUENCES OF YOUR IMPROPER ACTIONS COULD CAUSE SERIOUS OPERATIONAL MALFUNCTION, LOSS OF INFORMATION, DAMAGE TO EQUIPMENT, AND PHYSICAL INJURY TO YOURSELF AND OTHERS. A POTENTIALLY HAZARDOUS OPERATING CONDITION IS PRESENT WHEN THE FOLLOWING TWO CONDITIONS ARE CONCURRENTLY TRUE: THE PRODUCT IS PHYSICALLY INTERCONNECTED TO A REAL DISTRIBUTED EMBEDDED SYSTEM; AND THE FUNCTIONS AND OPERATIONS OF THE REAL DISTRIBUTED EMBEDDED SYSTEM ARE CONTROLLABLE OR INFLUENCED BY THE USE OF THE CAN NETWORK. A POTENTIALLY HAZARDOUS OPERATING CONDITION MAY RESULT FROM THE ACTIVITY OR NON-ACTIVITY OF SOME DISTRIBUTED EMBEDDED SYSTEM FUNCTIONS AND OPERATIONS, WHICH MAY RESULT IN SERIOUS PHYSICAL HARM OR DEATH OR CAUSE DAMAGE TO EQUIPMENT, DEVICES, OR THE SURROUNDING ENVIRONMENT.

WITH THIS DEVICE, YOU MAY POTENTIALLY:

- CAUSE A CHANGE IN THE OPERATION OF THE SYSTEM, MODULE, DEVICE, CIRCUIT, OR OUTPUT.
- TURN ON OR ACTIVATE A MODULE, DEVICE, CIRCUIT, OUTPUT, OR FUNCTION.
- TURN OFF OR DEACTIVATE A MODULE, DEVICE, CIRCUIT, OUTPUT, OR FUNCTION.
- INHIBIT, TURN OFF, OR DEACTIVATE NORMAL OPERATION.
- MODIFY THE BEHAVIOR OF A DISTRIBUTED PRODUCT.
- ACTIVATE AN UNINTENDED OPERATION.
- PLACE THE SYSTEM, MODULE, DEVICE, CIRCUIT, OR OUTPUT INTO AN UNINTENDED MODE.

ONLY THOSE PERSONS WHO:

(A) ARE PROPERLY TRAINED AND QUALIFIED WITH RESPECT TO THE USE OF THE DEVICE,

(B) UNDERSTAND THE WARNINGS ABOVE, AND

(C) UNDERSTAND HOW THIS DEVICE INTERACTS WITH AND IMPACTS THE FUNCTION AND SAFETY OF OTHER PRODUCTS IN A DISTRIBUTED SYSTEM AND THE APPLICATION FOR WHICH THIS DEVICE WILL BE APPLIED, MAY USE THE DEVICE.

PLEASE NOTE THAT YOU CAN INTEGRATE THIS PRODUCT AS A SUBSYSTEM INTO HIGHER-LEVEL SYSTEMS. IN CASE YOU DO SO, KVASER AB HEREBY DECLARES THAT KVASER AB'S WARRANTY SHALL BE LIMITED TO THE CORRECTION OF DEFECTS, AND KVASER AB HEREBY EXPRESSLY DISCLAIMS ANY LIABILITY OVER AND ABOVE THE REFUNDING OF THE PRICE PAID FOR THIS DEVICE, SINCE KVASER AB DOES NOT HAVE ANY INFLUENCE ON THE IMPLEMENTATIONS OF THE HIGHER-LEVEL SYSTEM, WHICH MAY BE DEFECTIVE.

6 Disposal and Recycling Information



When this product reaches its end of life, please dispose of it according to your local environmental laws and guidelines.

For information about Kvaser's recycling programs, visit:
<https://www.kvaser.com/en/kvaser/recycling-policy.html>

7 Legal acknowledgements

7.1 EU Regulatory Compliance

KVASER

EU Declaration of Conformity (DoC)

We

Company Name:

Kvaser AB

City:

Mölndal

Postal address:

Aminogatan 25

Telephone number:

+46 31 886344

Postcode:

431 53

E-mail address:

sales@kvaser.com

declare that the DoC is issued under our sole responsibility and belongs to the following product:

Product:

Kvaser Leaf v3 CB

Object of the declaration (identification of apparatus allowing traceability):

Product:

Kvaser Leaf v3 CB

Type:

73-30130-01532-6

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

Electromagnetic Compatibility (EMC) Directive 2014/30/EU (Art. 6)

RoHS recast Directive 2011/65/EU (Art. 4.1)

The following harmonised standards and technical specifications have been applied (title, date of standard/specification):

EN 55032 (2015 + A11:2020)

EN 55035 (2017 + A11:2020)


EN 61000-6-2 (2019)

EN IEC 63000 (2018)

Signed for and on behalf of:

Mölndal

2024-04-25



Place of issue

Date of issue

Kent Lennartsson, Research Manager

KVASER

Kvaser AB, Mölndal, Sweden — www.kvaser.com

7.2 FCC Regulatory Compliance



Federal Communications Commission (FCC) Compliance Information Statement

IDENTIFICATION OBJECT:

Product: Kvaser Leaf v3 CB

Type: 73-30130-01532-6

APPLICABLE COMPLIANCE STATEMENTS:

CFR Title 47 Part 15 §15.107, §15.109

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RESPONSIBLE PARTY (IN USA) NAME:

Kvaser Inc.

23881 Via Fabricante, Suite 503

Mission Viejo, CA 92691

Internet contact: support@kvaser.com

7.3 Patents, Copyrights and Trademarks

All trademarks are the property of their respective owner. Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Adobe, the Adobe logo, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

DeviceNet is a trademark of Open DeviceNet Vendor Association, Inc.

NMEA 2000 is the registered trademark of the National Marine Electronics Association, Inc.

For information about Kvaser related CAN patents, see www.kvaser.com/patent.

The products described in this document are protected by U.S. patent 5,696,911.

8 Document Revision History

Version history for document UG_98315_leaf_v3_cb:

Revision	Date	Changes
1.0	2024-04-25	Initial version.
1.1	2024-09-13	Updated pictures.